

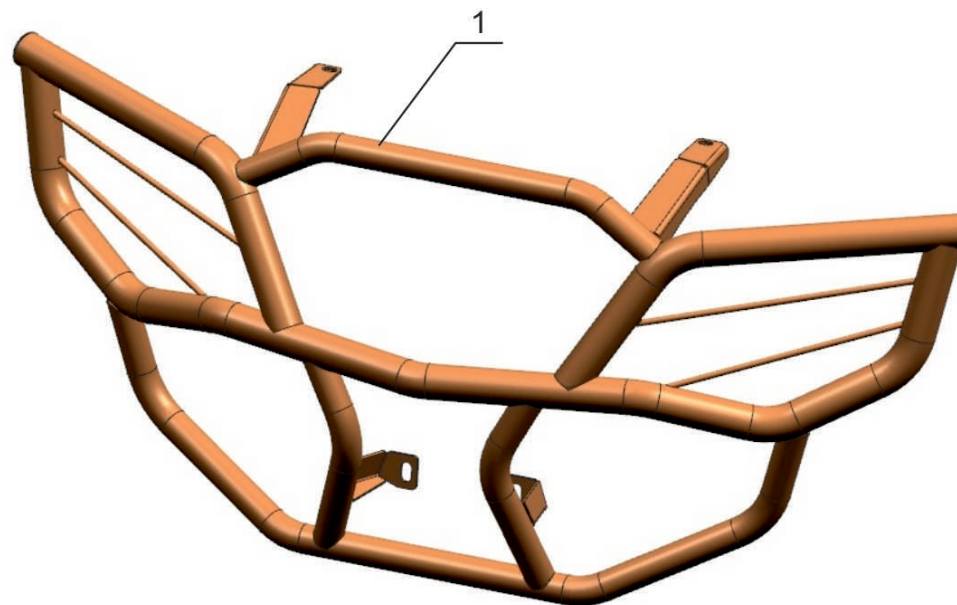
CF-moto / X550 (X5 H.O.)

Part No.: 2444.6847.1 Front bullbar
Brend: CF-moto
Model: X5 H.O.
Year: 2015-
Material: Tube 38x1,5 mm





Content

1. Bullbar..... 1 pc.



Installation Instructions

1. Screw bolts out of tray. Screw out bolts which fix the winch cable roll.
2. Install bulbar on the nose of ATV. Place upper part of bulbar between tray and frame and fix it with original bolts of the tray. Fix rear part of bulbar with bolts of winch cable roll.
3. Tighten all screws.

TOOLS REQUIRED		
	 S-4, S-5	 S-13, S14
SCREW FORCE		
 M6-10 Nm	 M8-30 Nm	 M10-50 Nm