


CF-moto / X550 (X5 H.O.)

Part No.: 2444.6848.1 Rear bullbar
Brend: CF-moto
Model: X5 H.O.
Year: 2015-
Material: Tube 38x1,5 mm



Content


1. Bullbar.....	1 pc.
2. Bracket.....	2 pc.
3. Bolt M8x25.....	4 pc.
4. Washer 8.....	8 pc.
5. Nut M8.....	4 pc.

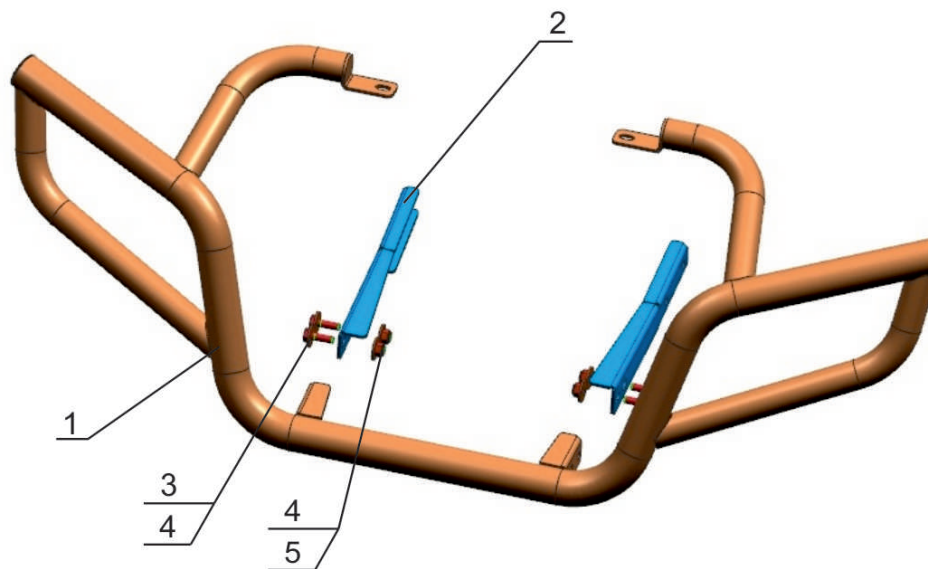

Installation Instructions

1. Remove factory bumper. Mount brackets no. 2 to fitting points of factory bumper, then fix them with original bolts.
2. Screw original bolts out of cargo tray.
3. Place RIVAL bulbar. Put upper end of bulbar between cargo tray and underframe, then fix with original bolts. Fix lower end of bulbar to brackets no. 2 with bolts no. 3, washers no. 4, nuts no. 5.
4. Tighten all screws.

TOOLS REQUIRED

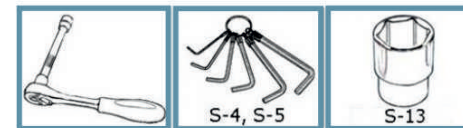

SCREW FORCE

