


Yamaha / Grizzly 700 / Kodiak 700

Part No.: 2444.7125.1 Front bumper
Brand: Yamaha
Model: Grizzly 700 / Kodiak 700
Year: 2015-
Material: Tube 38x1,5 mm



Content


| | |
|-----------------------|-------|
| 1. Bumper..... | 1 pc. |
| 2. Bracket..... | 2 pc. |
| 3. Clamp..... | 2 pc. |
| 4. Bracket..... | 2 pc. |
| 5. Clamp..... | 2 pc. |
| 6. Bolt M8x20..... | 4 pc. |
| 7. Bolt M10x16..... | 2 pc. |
| 8. Washer 8..... | 4 pc. |
| 9. Washer 10..... | 2 pc. |
| 10. Plastic plug..... | 2 pc. |

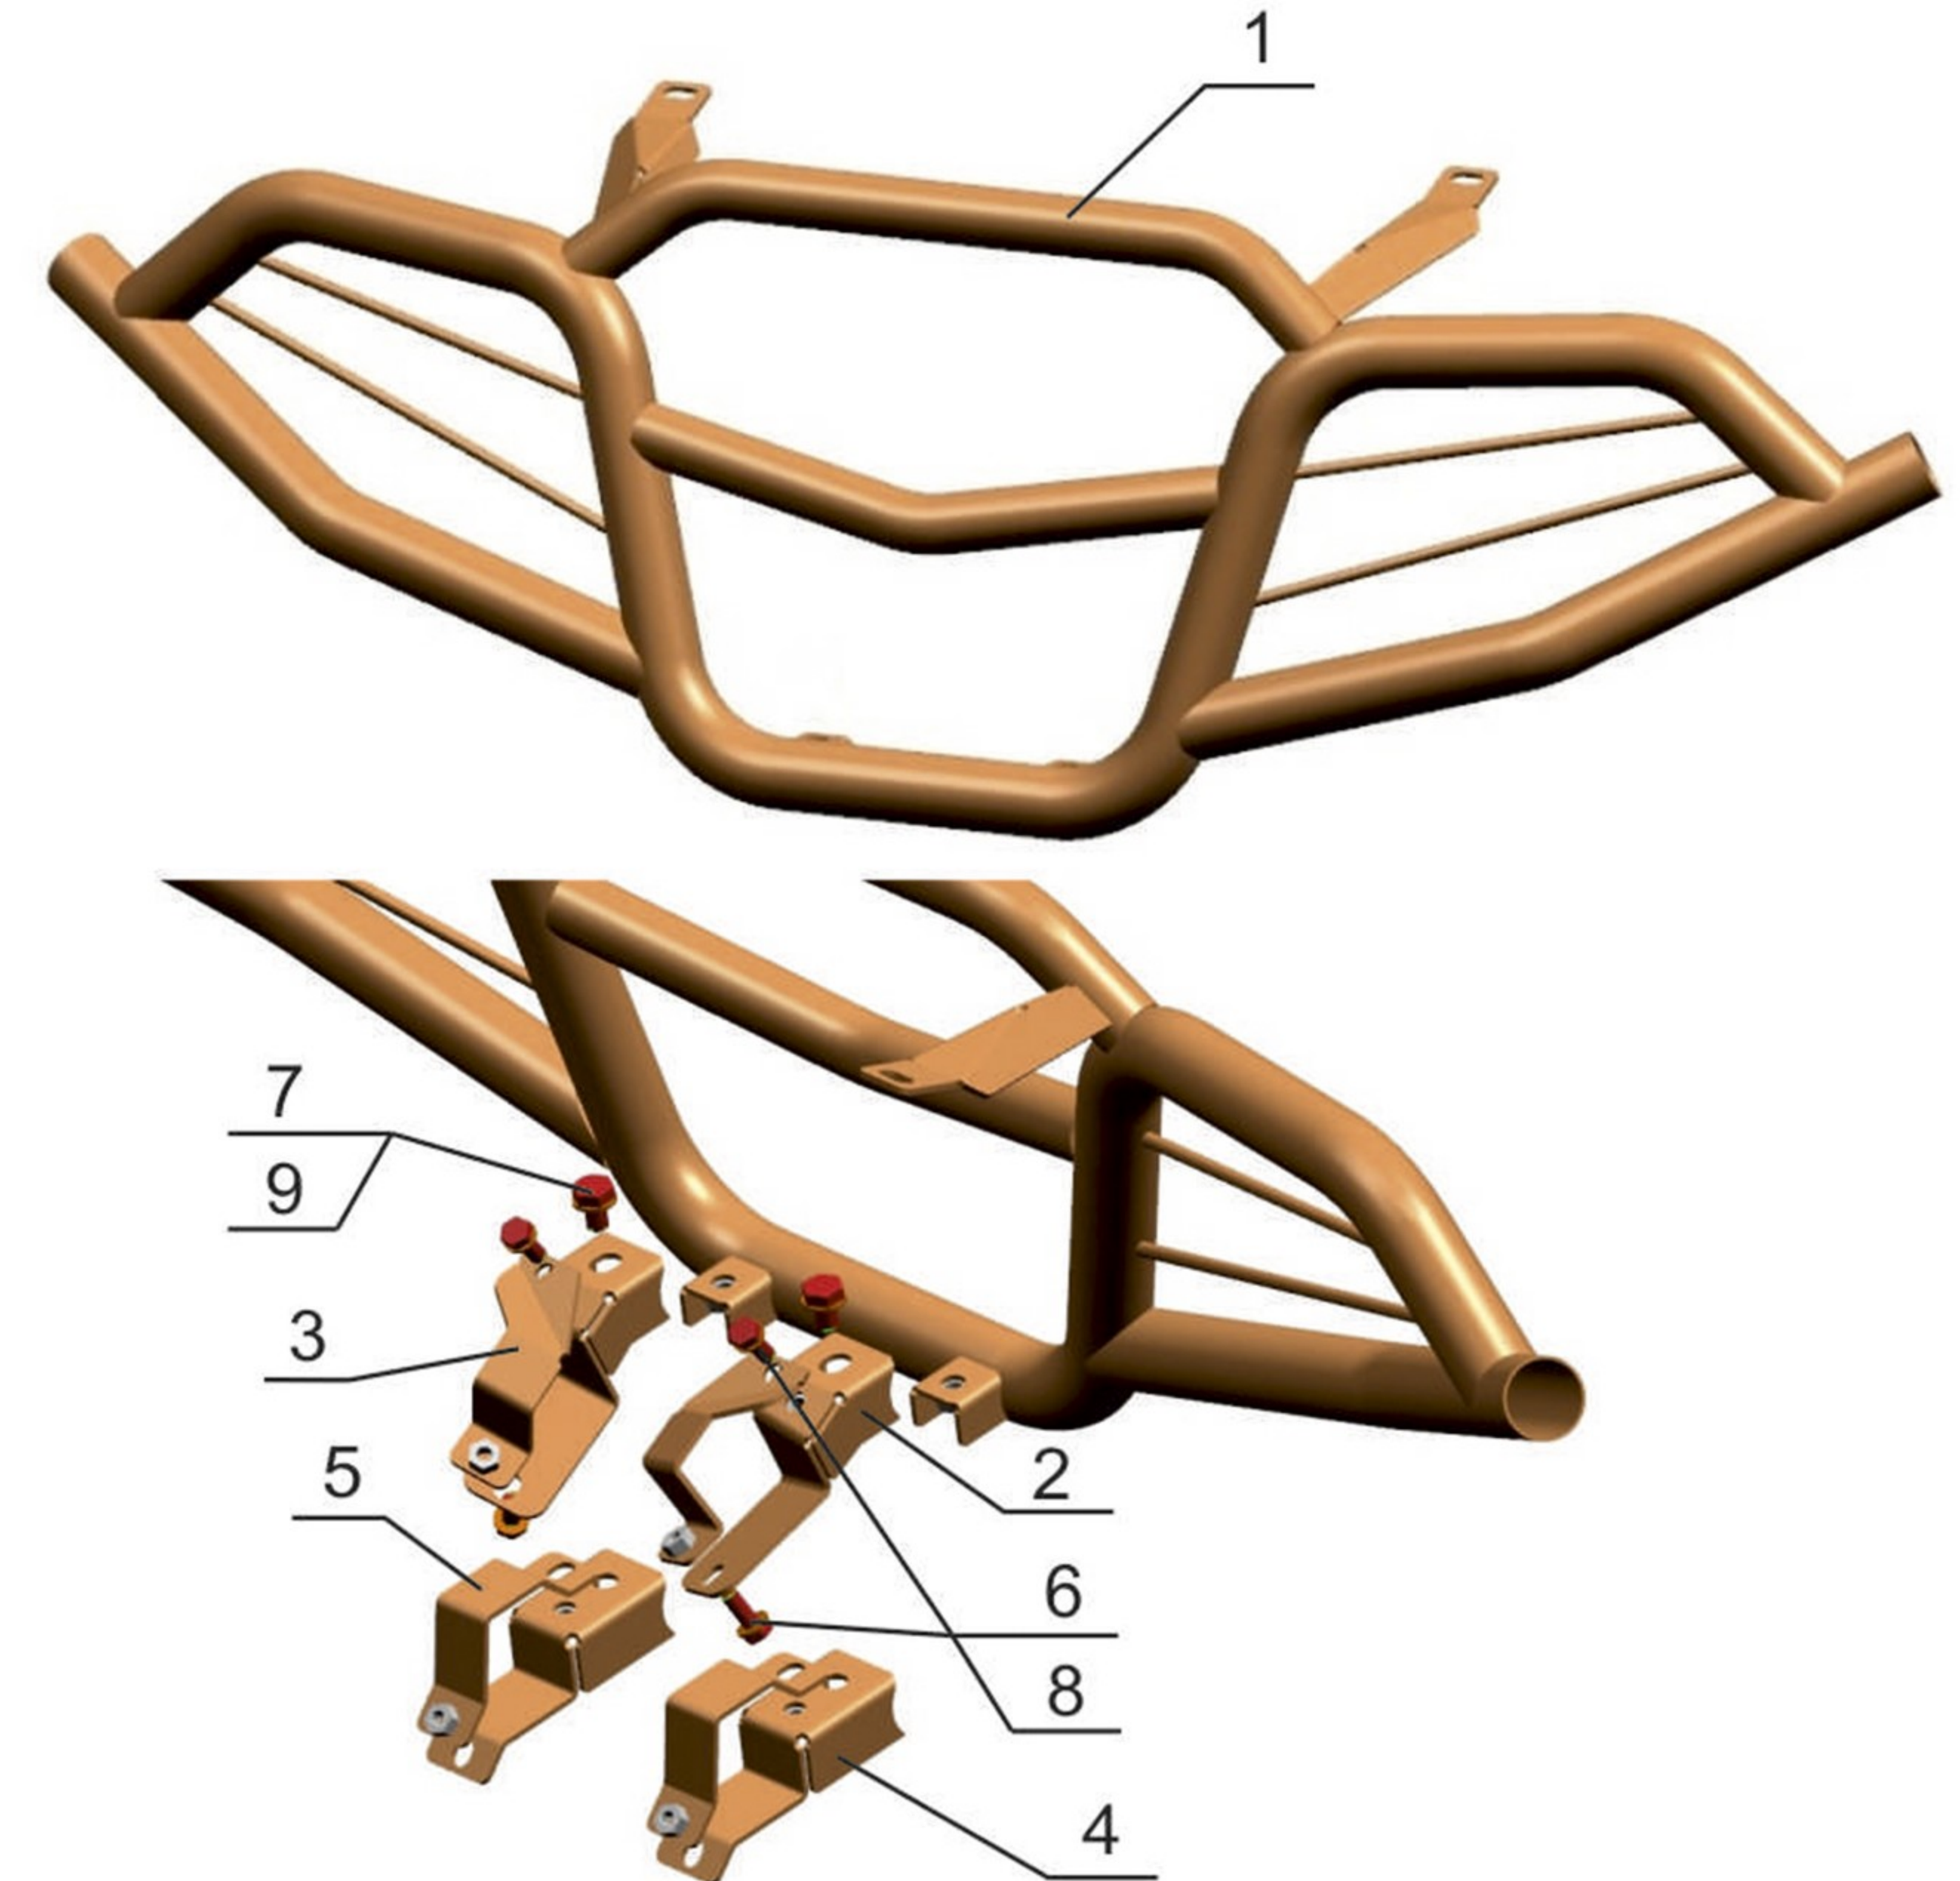


Installation Instructions

1. Screw original bolts out of front part of cargo tray. Place RIVAL front bumper. Fix upper end of bumper through apertures of cargo tray with original bolts.
2. Fix lower end of bumper to brackets no.2 (no.4) with bolts M10 no.7, washers no.9. Fix to original tube with clamps no.3 (no.5), bolts M8x20 no.6, washers no.8 (Use brackets no.2, clamps no.3 for Yamaha Grizzly, use brackets no.4, clamps no.5 for Yamaha Kodiak). Mount plastic plugs.
3. Tighten all screws.


TOOLS REQUIRED



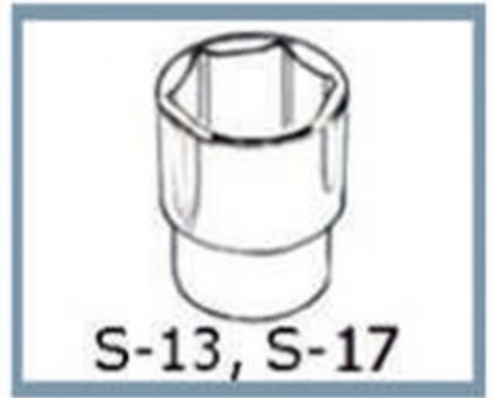


S-13, S-17


SCREW FORCE



M6-10 Nm



M8-30 Nm



M10-50 Nm