

EN BUMPER KIT INSTALLATION MANUAL


DE MONTAGEEINLEITUNG FÜR STOBFÄNGER-KIT




For: BRP Can-Am/Outlander G2 (2012-)

2444.7238.1;
444.7238.1



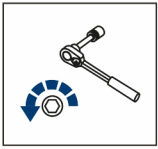


EN Regular fasteners
DE Originale montageile

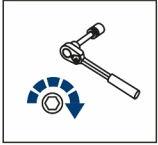


EN Regular fasteners
DE Originale montageile




EN Screw a several turns
DE Für wenigen Umdrehungen befestigen

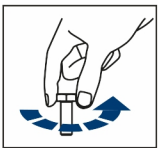

EN Loosen bolts
DE Bolzen lockern

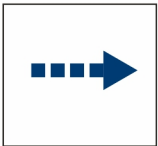


EN Movement Arrow
DE Bewegungsrichtung

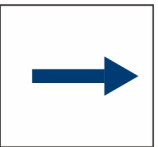





EN Location/Position Arrow
DE Anordnung/Positionsrichtung

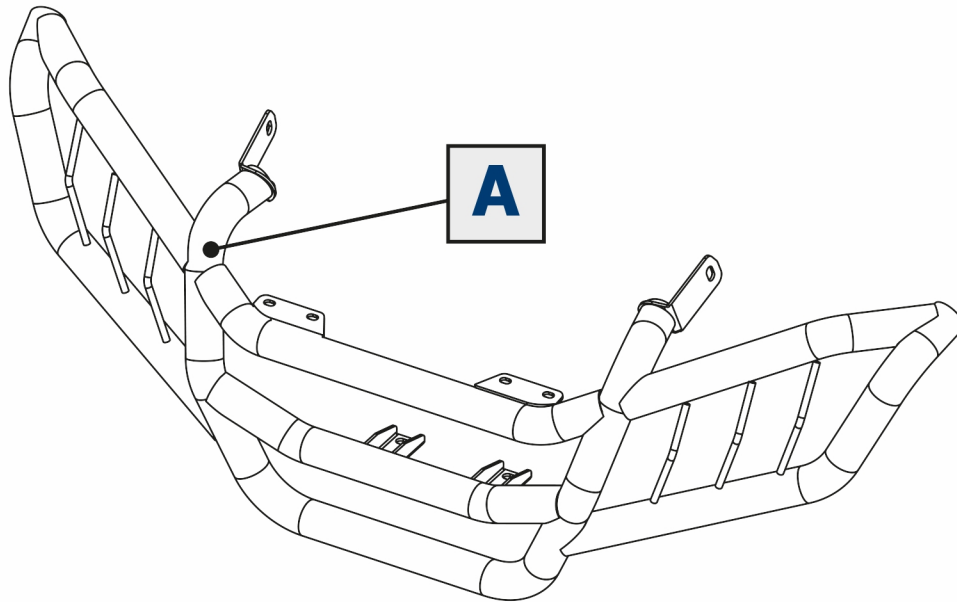

EN Screw Arrow
DE Drehungsrichtung



1  M8x20 x2	2  M8x25 x2	3  M8 x4	4  ø8 x6
--	--	---	---

