

EN SKID PLATE INSTALLATION MANUAL


DE MONTAGEEINLEITUNG FÜR UNTERBODENSCHUTZSYSTEM




For: POLARIS RANGER SP 570 (2022)

2444.7486.1




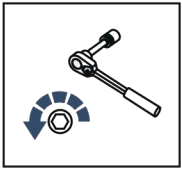


EN Regular fasteners
DE Originale montageteile

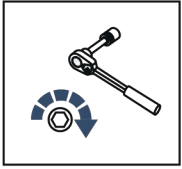


EN Regular fasteners
DE Originale montageteile

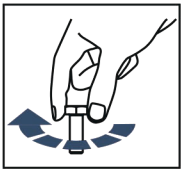


EN Screw a several turns
DE Für wenigen Umdrehungen befestigen

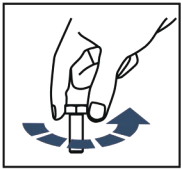


EN Loosen bolts
DE Bolzen lockern

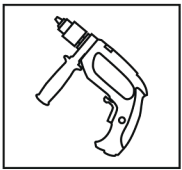


EN Drill
DE Bohrer

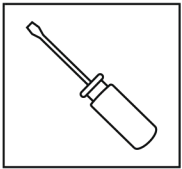


EN Screwdriver
DE Schraubenzieher

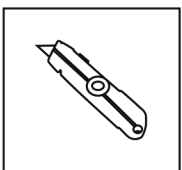


EN Office Knife
DE Büromesser




EN Ratchet
DE Ratsche



S - 10;
S - 13

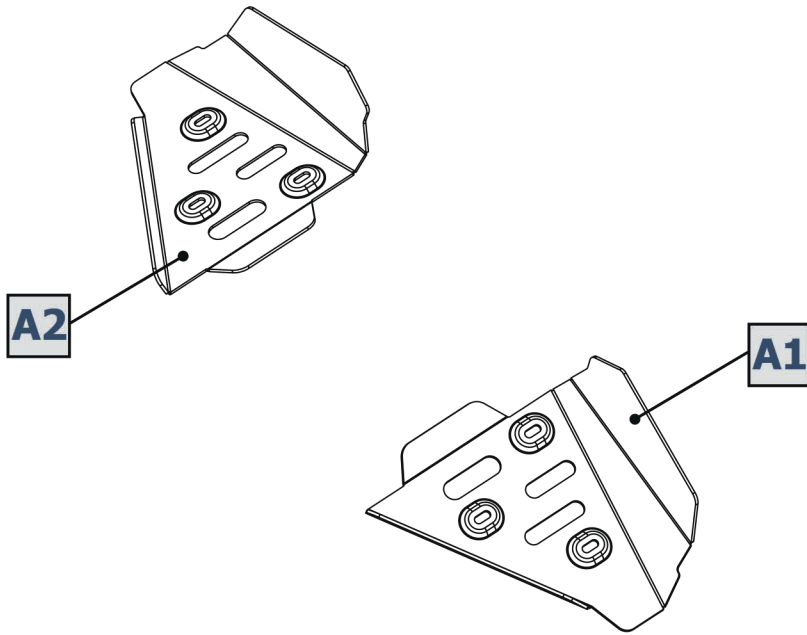

1



x6

2



M8x25






x6


3




Ø8

x6

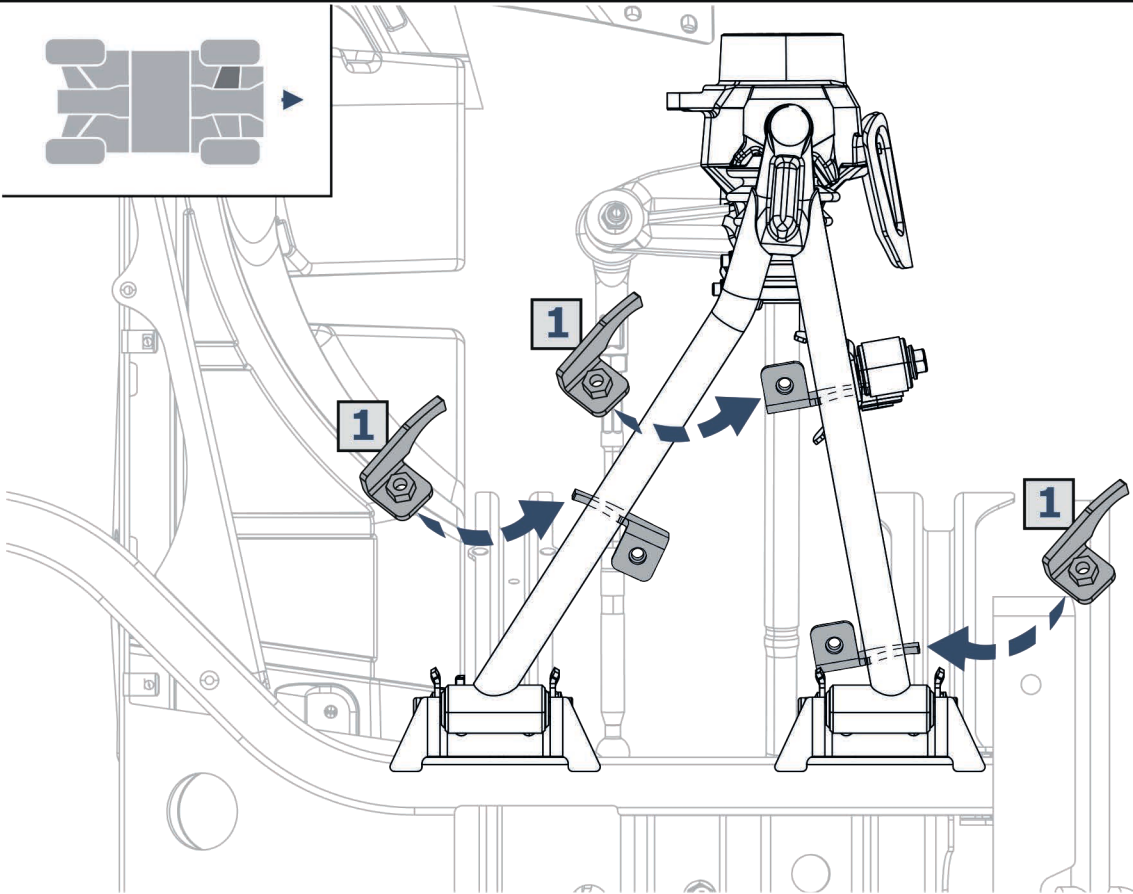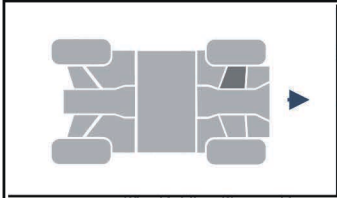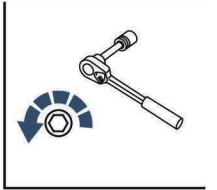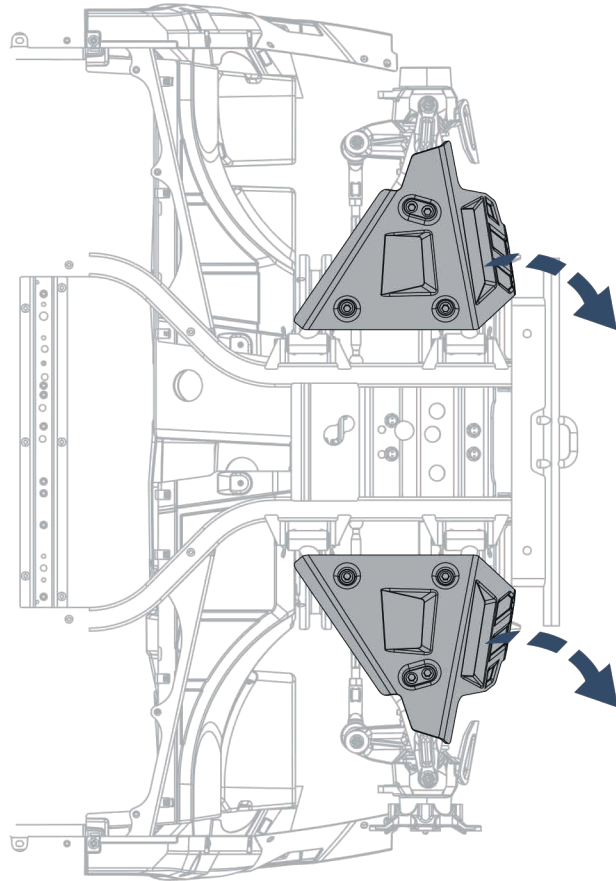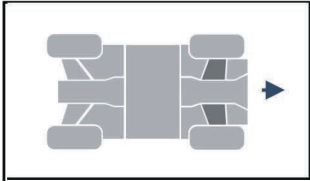

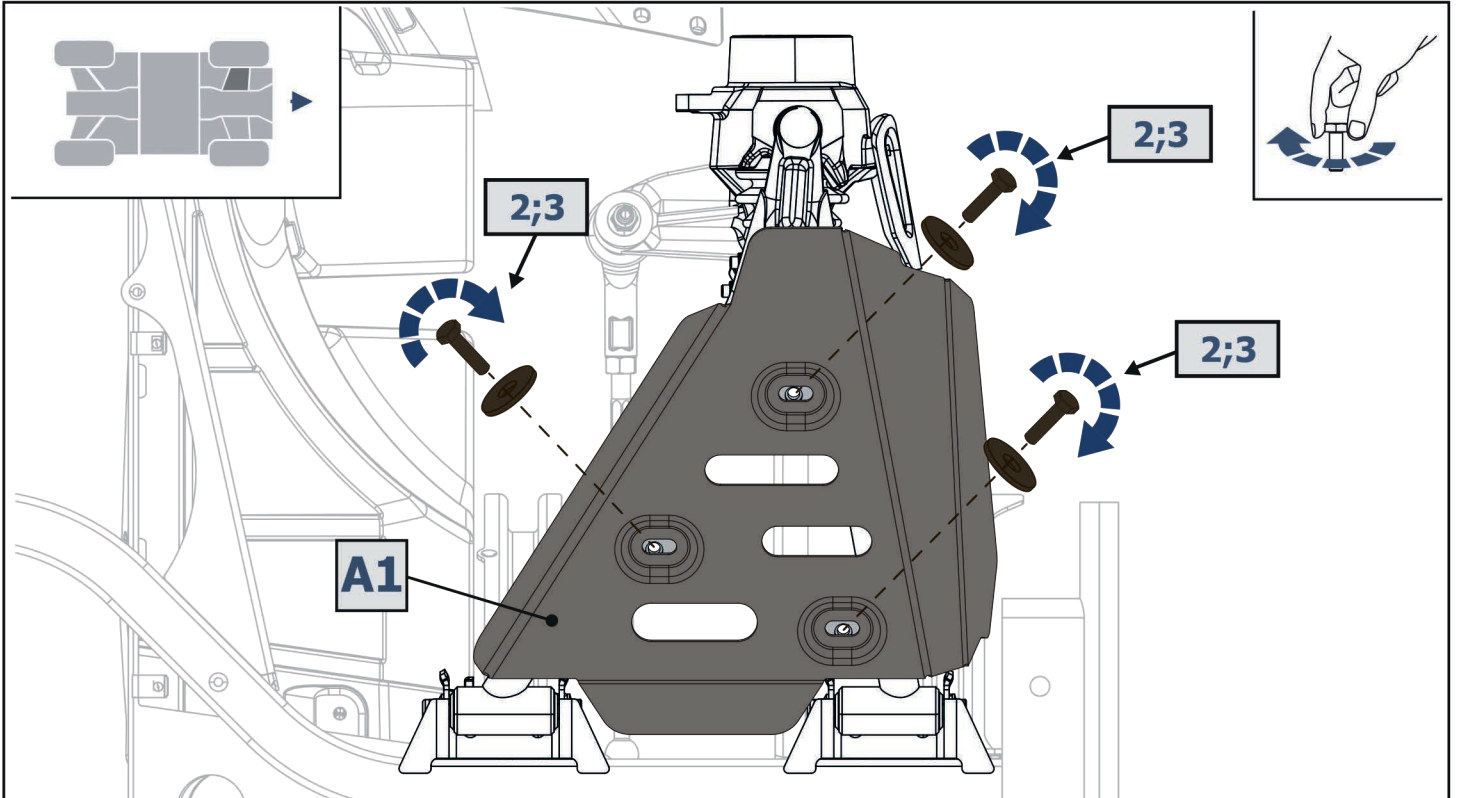

A1=A2

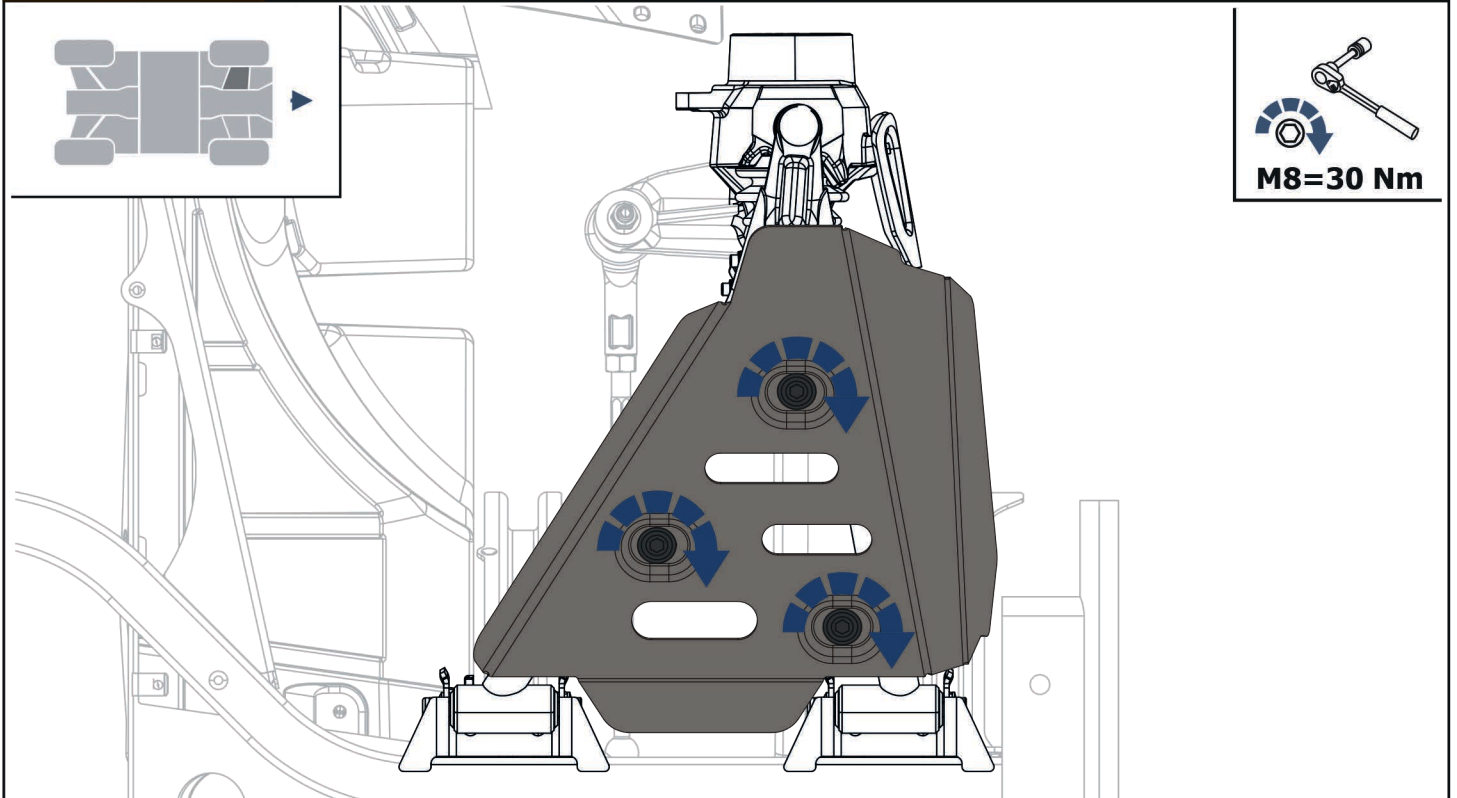

A1=A2