

EN INSTALLATION MANUAL FRONT BUMPER

DE MONTAGEEINLEITUNG FÜR STOBFÄNGER-KIT


Fitting Video




For: POLARIS RANGER SP 570 (2022)

2444.7493.1



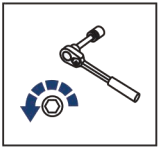

EN Regular fasteners
DE Originale montageile

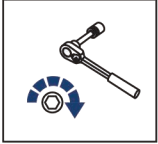


EN Regular fasteners
DE Originale montageile




EN Screw a several turns
DE Für wenigen Umdrehungen befestigen



EN Loosen bolts
DE Bolzen lockern

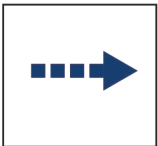



EN Movement Arrow
DE Bewegungsrichtung

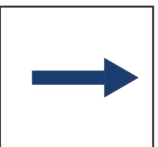




EN Location/Position Arrow
DE Anordnung/Positionsrichtung

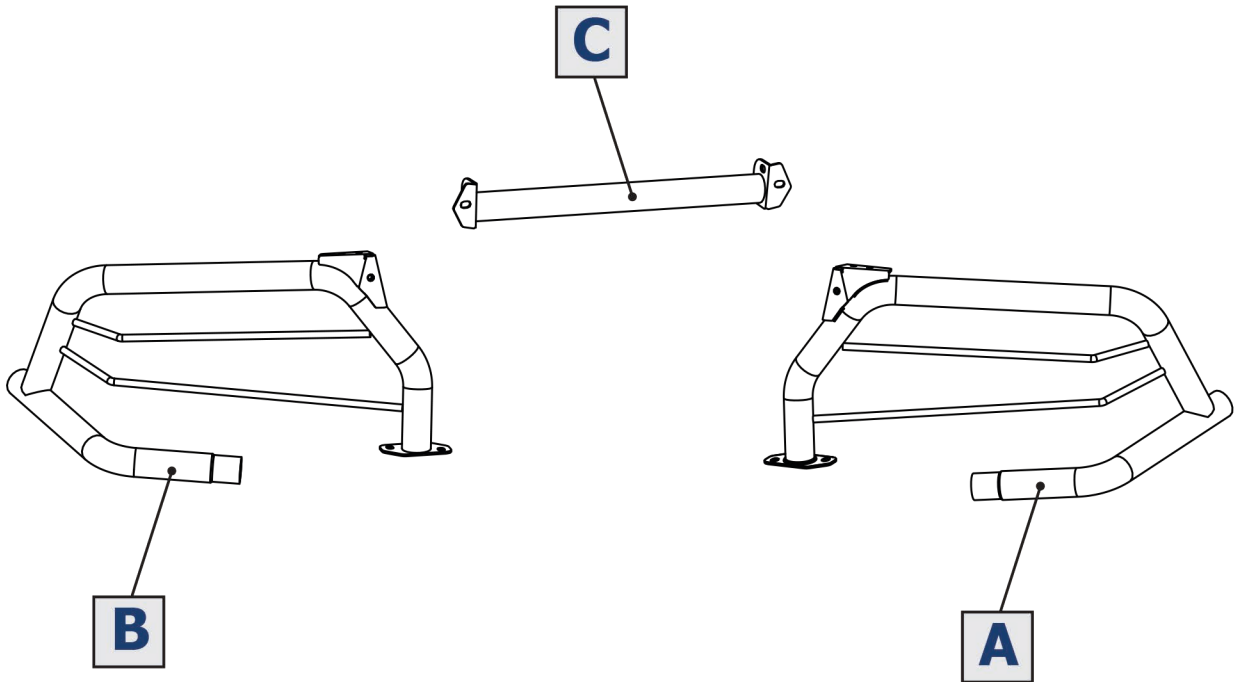

EN Screw Arrow
DE Drehungsrichtung



1		2		3				
M8x20	x8	Ø8	x12	M8	x4			

