

EN SKID PLATE INSTALLATION MANUAL


DE MONTAGEANLEITUNG FÜR UNTERBODEN SCHUTZ SYSTEM




For: CF Moto Z8 (2013-)

2444.8142.1



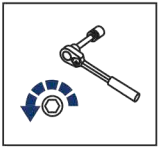


EN Regular fasteners
DE Originale montageile

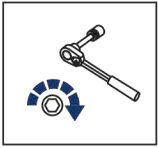


EN Regular fasteners
DE Originale montageile




EN Screw a several turns
DE Für wenigen Umdrehungen befestigen

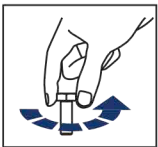

EN Loosen bolts
DE Bolzen lockern

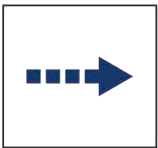




EN Movement Arrow
DE Bewegungsrichtung

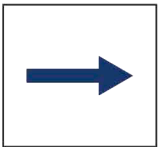




EN Location/Position Arrow
DE Anordnung/Positionsrichtung





EN Screw Arrow
DE Drehungsrichtung

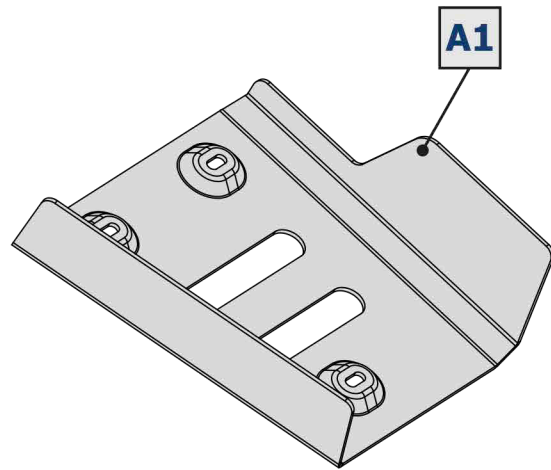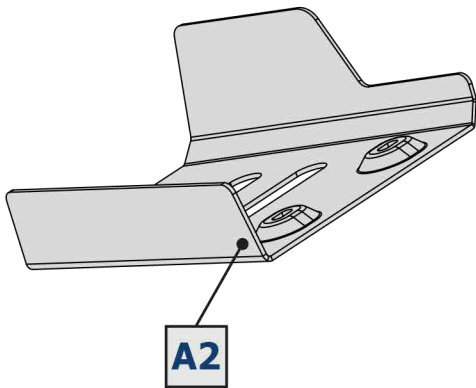

<p>1</p>  <p>Ø8 x6</p>	<p>2</p>  <p>M8x25 x6</p>	<p>3</p>  <p>x6</p>
--	---	---

PRE-INSTALLATION: LAY OUT COMPONENTS AND COMPARE TO LIST AND IMAGES. IMAGES MAY NOT PORTRAY THE FULL DETAIL OR EXACT SHAPE OF THE PARTS; HOWEVER, THEY REPRESENT PARTS THAT HAVE SAME OR SIMILAR FUNCTION.

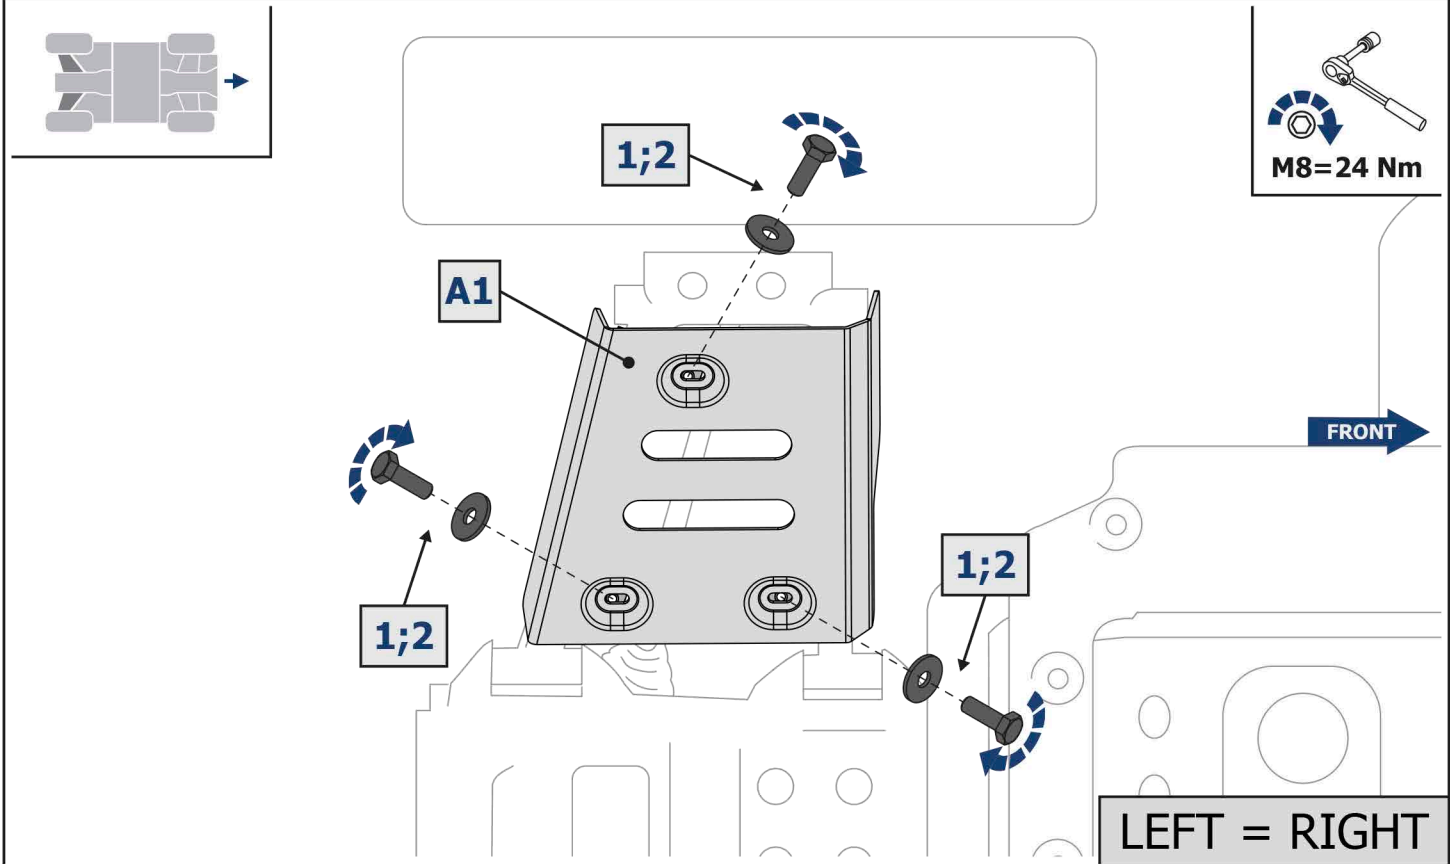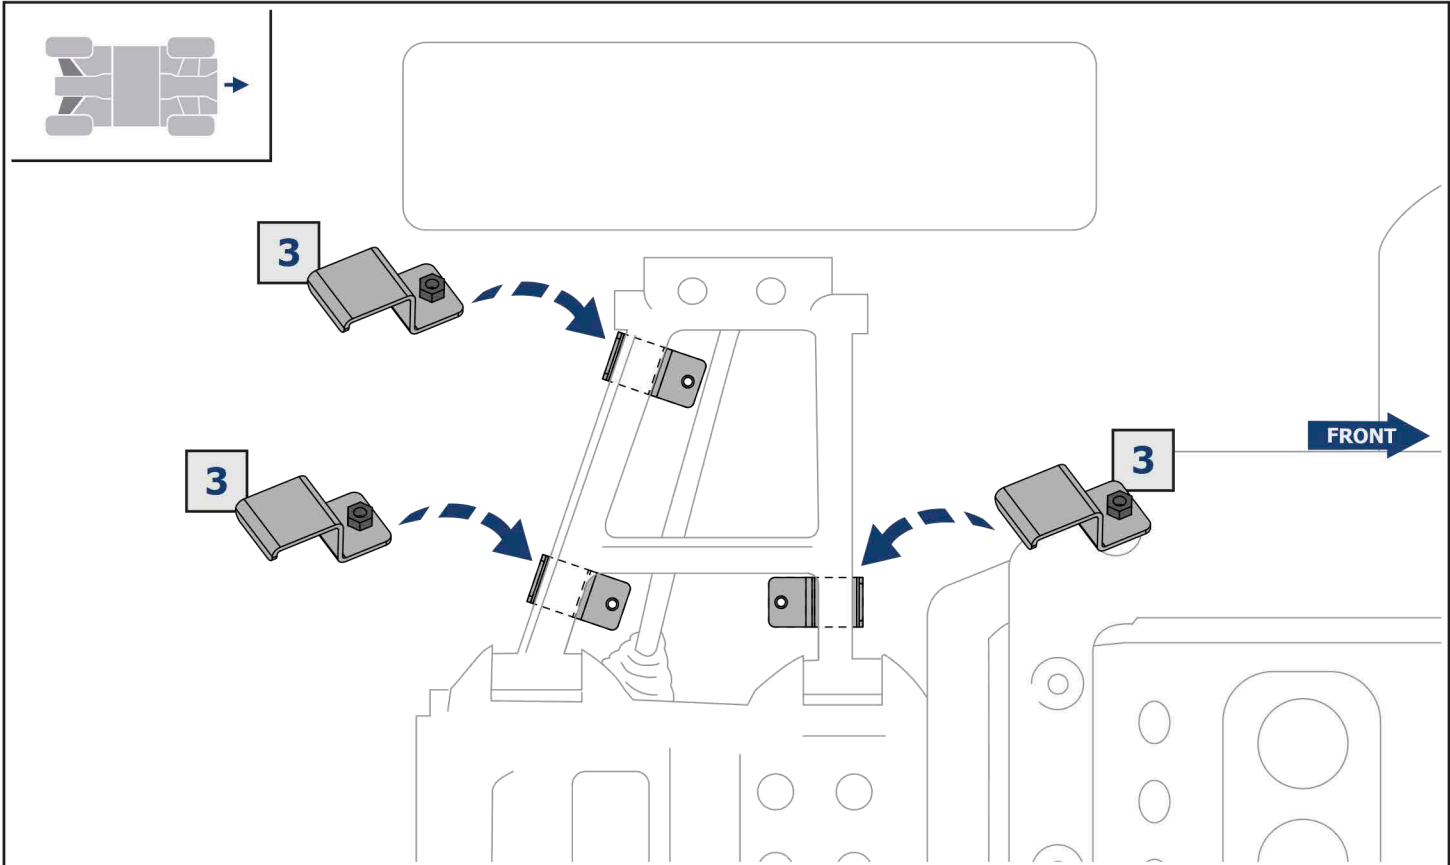

TIP: PERIODICALLY CHECK ALL HARDWARE AND RE-TIGHTEN IF NEEDED.